


UNIVERSAL DECK CLIPS

CAMO Universal Deck Clips make installing grooved decking on wood and metal joists easy for everyone. These hidden deck clips are designed and warranted for use with leading grooved decking and result in a beautiful fastener-free surface that you can install in half the time of other hidden fasteners. Fasten EDGE®, WEDGECLIP™, and WEDGEMETAL® Clips by hand with the included NEVER-MISS® Guide, or, for the best experience, standing up with ClipDRIVE™ or DRIVE.

INTRODUCTION	9
STARTER	10
EDGE	12
WEDGECLIP	14
WEDGEMETAL	16



Get to know your Clips

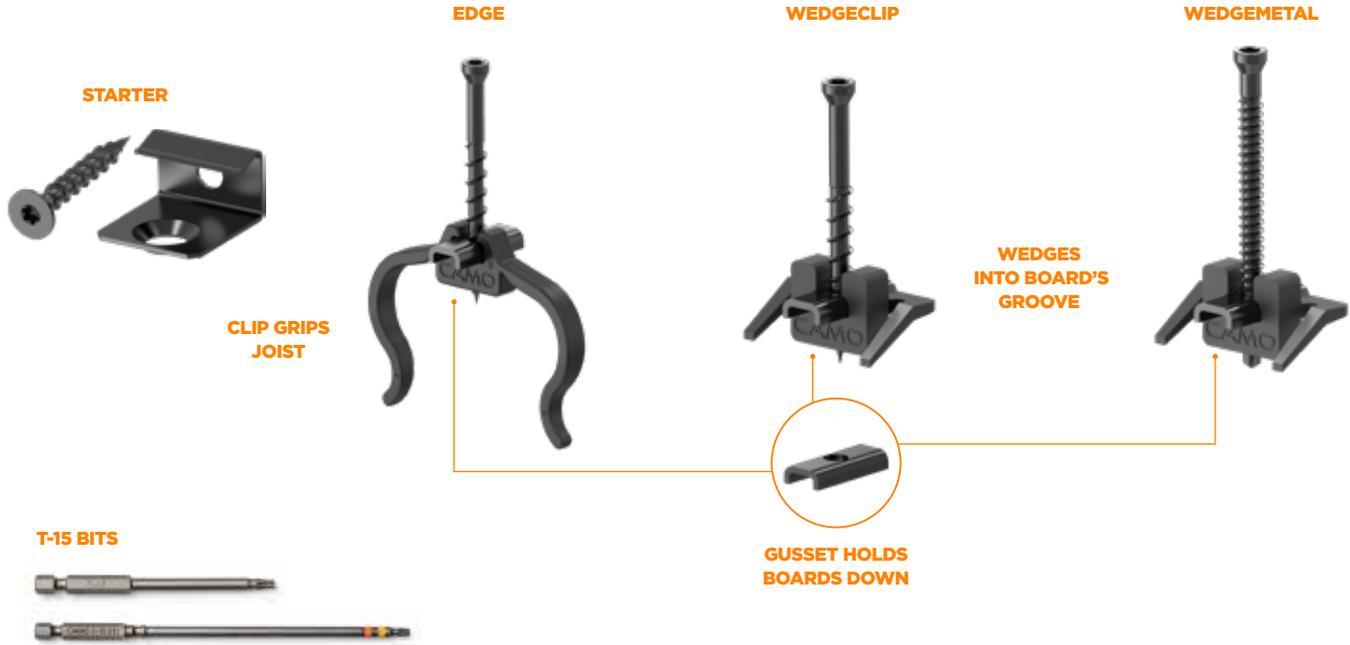

WHICH CLIPS SHOULD I USE?

CLIP TYPE	90° PATTERNS	ANY PATTERN
	STARTER CLIPS	✓
EDGE CLIPS	✓	X
WEDGECLIPS	✓	✓
WEDGEMETAL CLIPS	✓	✓

GROOVED BOARD TYPE	
COMPOSITE	✓
PVC	✓
CAPPED COMPOSITE	✓
HARDWOOD	✓

Please reference our specific board installation instructions by board type on page 56

Setup for STARTER Clips



A INSERT T-15 BIT



Insert the T-15 driver bit into your drill. Do not use an impact driver.

B ADJUST DRILL



If your drill has a drill and clutch mode, set it to clutch mode. Turn down torque to the lowest setting. Increase as necessary until the board is snugly fastened by the clip. Do not overdrive.

How to fasten STARTER Clips



1



FASTEN CLIP ON JOIST

Place clip on the joist, centered with the cross joist, and fasten.

2



REPEAT

Install a STARTER Clip at every joist.

3



PLACE BOARD

Tilt board up slightly to set it in the clips.

4



LAY BOARD DOWN

Gently push the board down to lock it in place.

Setup for EDGE Clips



A INSERT T-15 BIT



Insert the T-15 driver bit into your drill.
Do not use an impact driver.

B ADJUST DRILL



If your drill has a drill and clutch mode, set it to clutch mode. Turn down torque to the lowest setting. Increase as necessary until the board is snugly fastened by the clip. Do not overdrive.

How to fasten EDGE Clips



BEFORE YOU BEGIN

Fasten your first board with CAMO STARTER Clips (p. 11).



SCAN TO
WATCH THE
HOW-TO
VIDEO

1



PLACE CLIP ON JOIST

Place a clip on the joist with the gusset in the groove. Clips stay in place until you're ready to fasten.

2



REPEAT ALONG THE BOARD

Place a clip at every joist along the length of the board.

3



SLIDE ON NEXT BOARD

Place the next board up against the clips, and repeat until you have multiple rows of boards and clips.

4



LOCK-IN YOUR BOARDS

Hold the boards tightly, or lock them in place with CAMO LEVER® (sold separately).



5



FASTEN WITH NEVER-MISS® GUIDE

Starting at the outermost board, place the NEVER-MISS Guide (included IN 450 ct and 900 ct) over the screw head, connect the bit to the head and drive until clip is snug. **Do not overdrive.** Repeat until all inner boards are fastened.



OR FASTEN WITH CLIPDRIVE™ (OPTIONAL)

To fasten with ClipDRIVE, starting at the outermost board, put the nose over the screw head and drive at full RPM while applying downward pressure. Repeat until all inner boards are fastened. See full instructions on page 7.

Setup for WEDGECLIPS



A INSERT T-15 BIT



Insert the T-15 driver bit into your drill. Do not use an impact driver.

B ADJUST DRILL



If your drill has a drill and clutch mode, set it to clutch mode. Turn down torque to the lowest setting. Increase as necessary until the board is snugly fastened by the clip. Do not overdrive.

How to fasten WEDGECLIPS



BEFORE YOU BEGIN

Fasten your first board with CAMO STARTER Clips (p. 11).



SCAN TO
WATCH THE
HOW-TO
VIDEO

1



WEDGE INTO GROOVE

Tilt the WEDGECLIP so the lower prongs enter the groove first. Tilt the clip back up to wedge into the groove. Clips stay in place until you're ready to fasten.

2



REPEAT ALONG THE BOARD

Place a clip at every joist along the length of the board.

3



SLIDE ON NEXT BOARD

Place the next board up against the clips, and repeat until you have multiple rows of boards and clips.

4



LOCK-IN YOUR BOARDS

Hold the boards tightly, or lock them in place with CAMO LEVER® (sold separately).



5



FASTEN WITH NEVER-MISS® GUIDE

Starting at the outermost board, place the NEVER-MISS Guide (included in 450 and 900 ct) over the screw head, connect the bit to the head and drive until clip is snug. **Do not overdrive.** Repeat until all inner boards are fastened.



OR FASTEN WITH CLIPDRIVE™ (OPTIONAL)

To fasten with ClipDRIVE, starting at the outermost board, put the nose over the screw head and drive at full RPM while applying downward pressure. Repeat until all inner boards are fastened. See full instructions on pages 7.

Setup for WEDGEMETAL Clips



A INSERT T-15 BIT



Insert the T-15 driver bit into your drill.
Do not use an impact driver.

B ADJUST DRILL



If your drill has a drill and clutch mode, set it to clutch mode. Turn down torque to the lowest setting. Increase as necessary until the board is snugly fastened by the clip. Do not overdrive.

How to fasten WEDGEMETAL Clips



SCAN TO
WATCH THE
HOW-TO
VIDEO

1



WEDGE INTO GROOVE

Tilt the WEDGEMETAL Clip so the lower prongs enter the groove first. Tilt the clip backup to wedge into the groove. Clips stay in place until you're ready to fasten.

2



REPEAT ALONG THE BOARD

Place a clip at every joist along the length of the board.

3



SLIDE ON NEXT BOARD

Place the next board up against the clips, and repeat until you have multiple rows of boards and clips.

4



LOCK-IN YOUR BOARDS

Hold the boards tightly, or lock them in place with CAMO LEVER® (sold separately).



5




FASTEN WITH NEVER-MISS® GUIDE

Starting at the outermost board, place the NEVER-MISS Guide (included in 450 ct AND 900 ct) over the screw head, connect the bit to the head and drive. Repeat until all inner boards are fastened.



OR FASTEN WITH CLIPDRIVE™ (OPTIONAL)

To fasten with ClipDRIVE, starting at the outermost board, put the nose over the screw head and drive at full RPM while applying downward pressure. Repeat until all inner boards are fastened. See full instructions on pages 7.

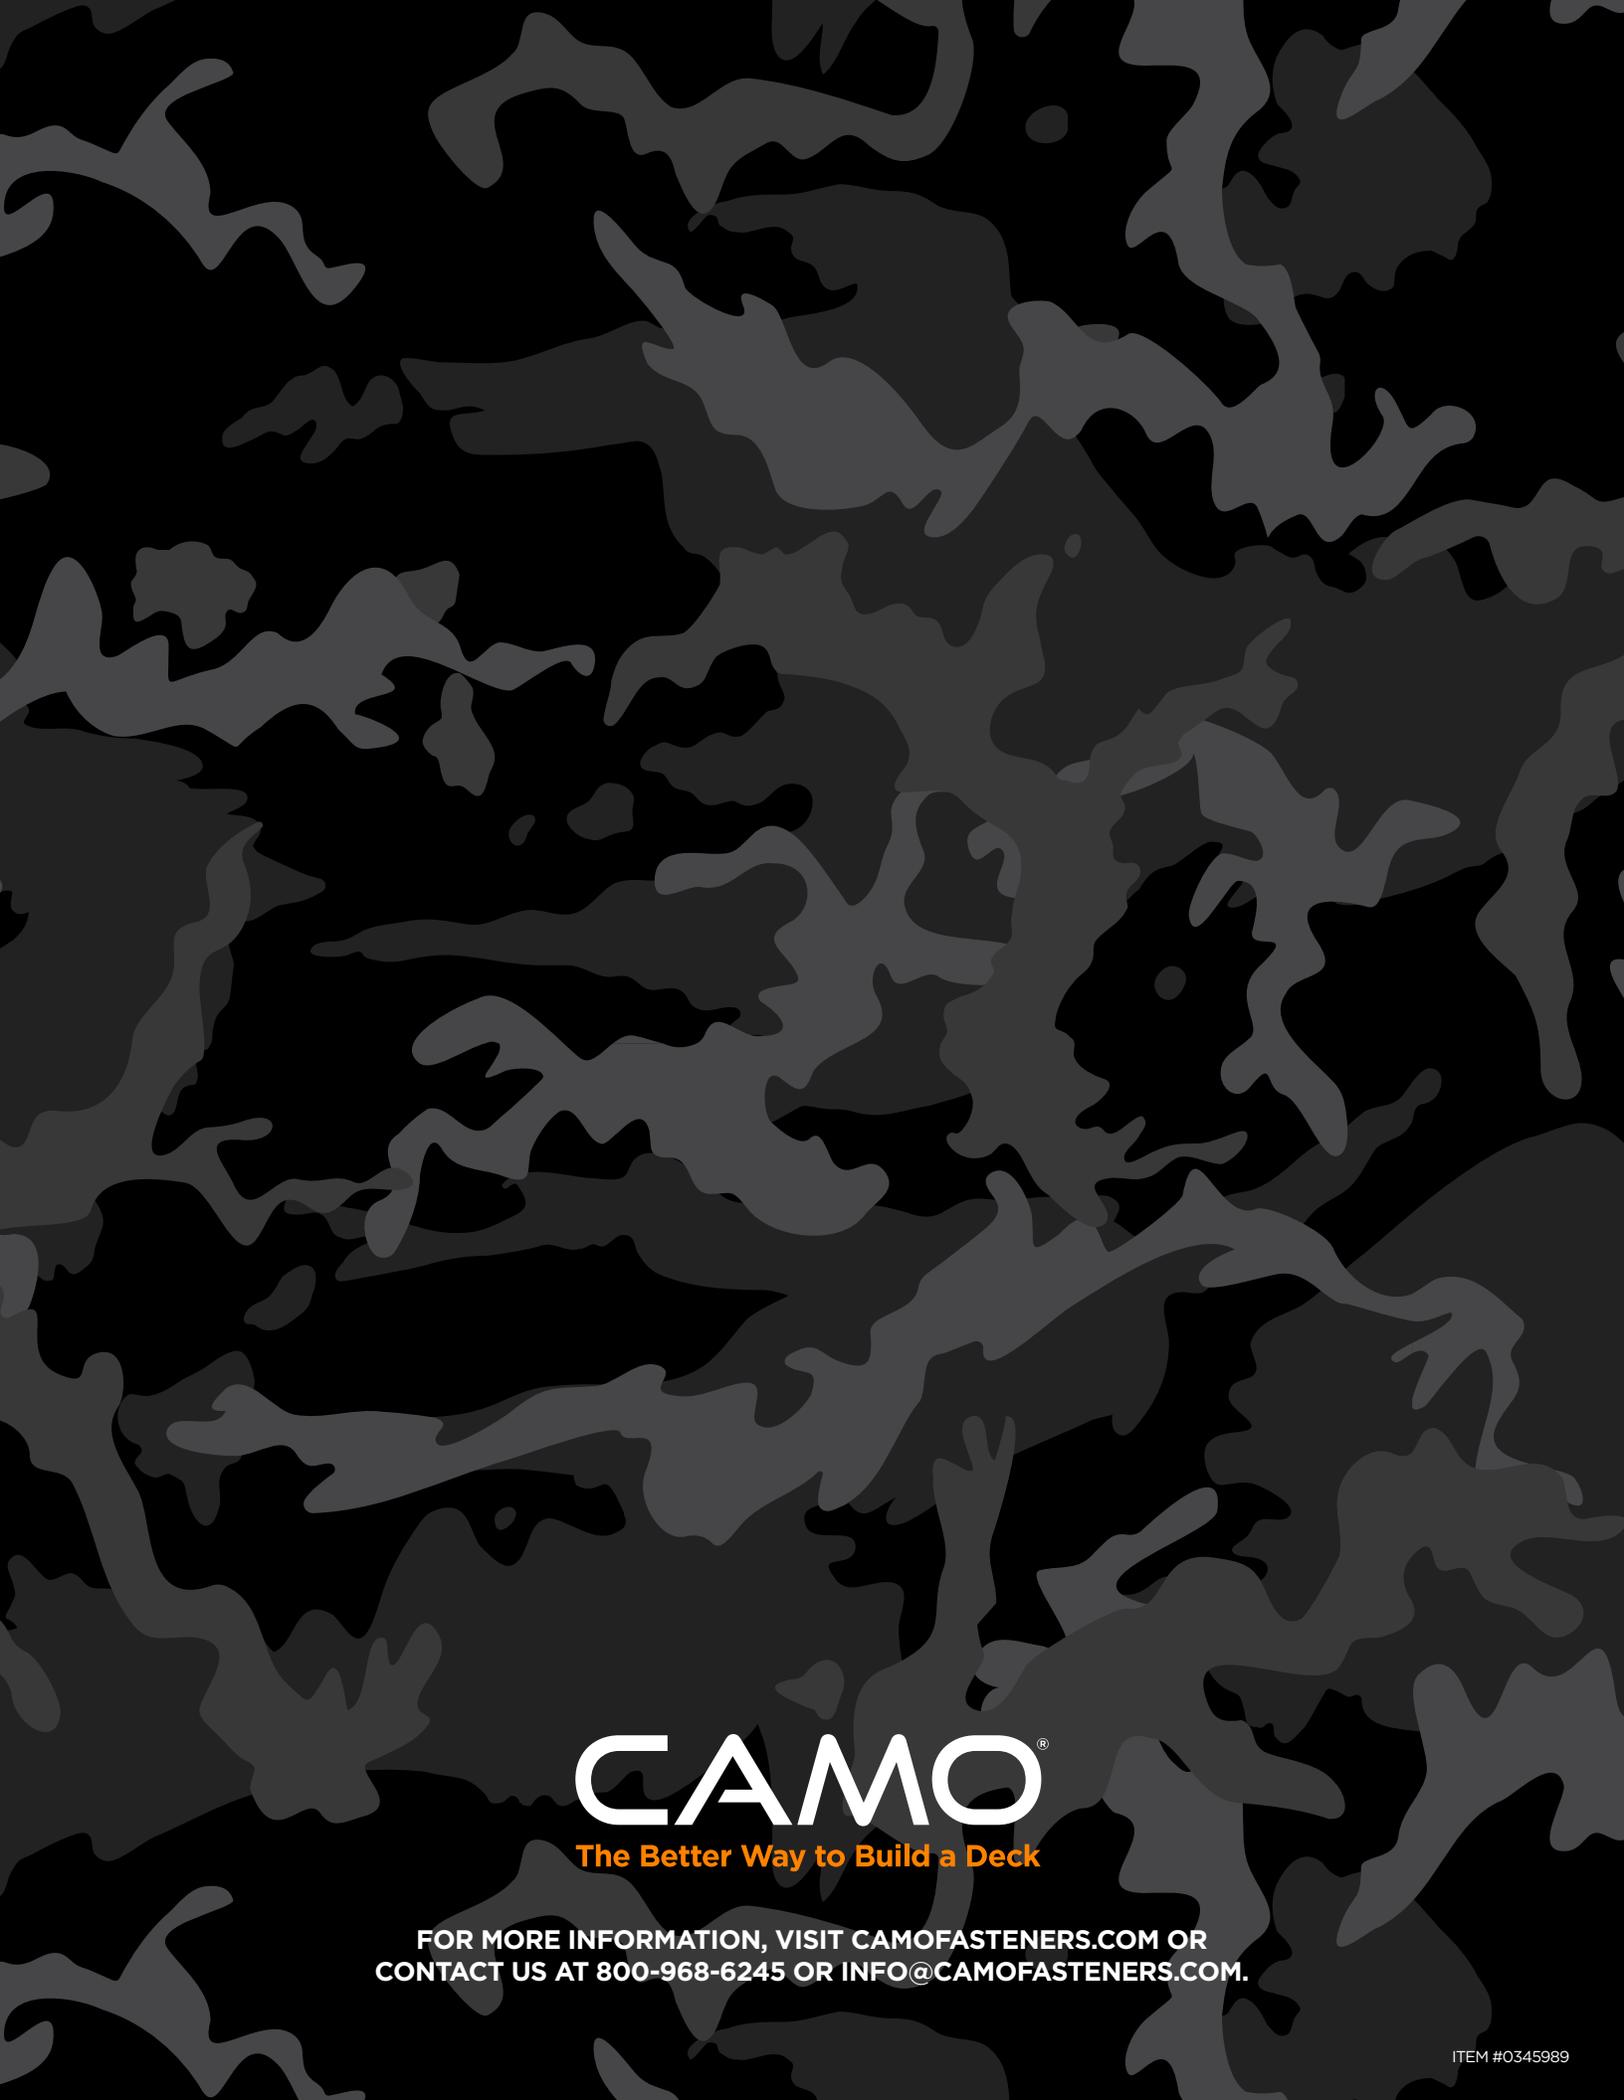

CAMO[®]

The Better Way to Build a Deck

FOR MORE INFORMATION, VISIT CAMOFASTENERS.COM OR
CONTACT US AT 800-968-6245 OR INFO@CAMOFASTENERS.COM.

ITEM #0345989