

JOB NAME:	
CONTRACTOR:	DATE:
CAMO® WEDGECLIP™	



Size: #7 x 1-3/4-in
Head Type: Trim
Drive Type: T15 Star
Point Type: Sharp Point



APPLICATION For indoor or outdoor applications
 Designed for installation of grooved deck board materials on wood joists

FEATURES Compatible with chemically treated lumber
 Features black coating for reduced visibility
 UV protected plastic clip
 Clip covers and hides joist visibility
 Gusset designed for high holding power
 Screw remains accessible for easy removal

MATERIALS 316 Stainless Gusset
 316 Stainless Screw
 Nylon Plastic Spacer Body

COATINGS Black coating over 316 Stainless meets ASTM B117 for salt spray corrosion testing
 Black coating over 316 stainless steel is compatible with chemically treated lumber

INSTALLATION Not recommended for use with impact drivers
 Works in tandem with the CAMO Starter Clip for grooved deck boards




CAUTION




Not intended for side wall applications

Deck boards have many different shapes forming the grooves used for clip attachment. Shape variations may include rounded corners and slightly angled grooves. The steeper these angles, the less effective pre-installation will be. The deeper the groove extends into the board, the higher the risk of board damage from overtightening the screw.

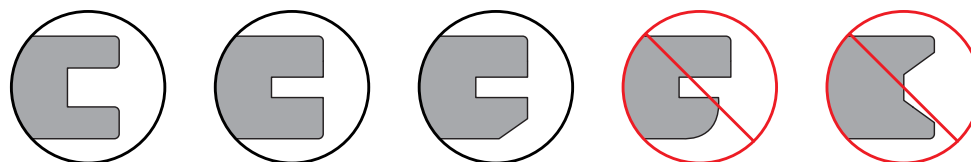

PENETRATION DEPTH


MINIMUM deck board groove should be 1/8" tall x 1/4" deep. The material remaining below groove (dim A) must be at least 1/4". The bottom of the plastic part of the clip is not designed to contact the joist. See image to the right for a visual representation of the clip's gusset and screw.

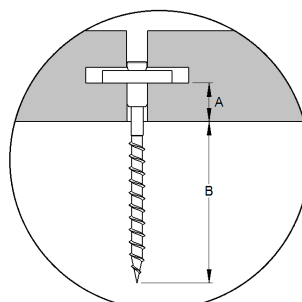

Dimension A	Dimension B
1/4 in	1-1/4 in
3/8 in	1-1/8 in
1/2 in	1 in

CAMO® WEDGECLIP™

FASTENER DIMENSIONS

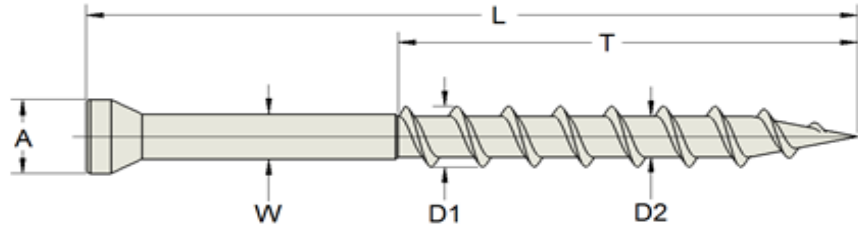

Head Dia.	Major Thread Dia.	Minor Thread Dia.	Overall Length	Shank Dia.	Thread Length
A	D1	D2	L	W	T
Ø 0.200 in	Ø 0.167 in	Ø 0.109 in	1-3/4 in	Ø 0.122 in	1 in

DIRECTIONS

Tilt clip back slightly from deck board and place the tips of the fingers into the groove. Press down to compress the fingers enough to rotate the clip vertical so the gusset also enters the groove. Take care to place it so there is a joist board directly underneath. Repeat for each joist along the length of the deck board. Place the next deck board in position and slide against the clips. The groove should slip over the exposed gusset on the clips. Maintain steady pressure on deck board while securing the screws. While the CAMO LEVER® tool maintains this steady pressure, use a standard screw gun, the included T15 drive bit, and the included NEVER-MISS® Guide to secure the screw to the joist. For the most efficient installation, use the CAMO DRIVE® tool or CAMO ClipDRIVE® tool (each sold separately).



*Never Miss Guide
(included in 450 ct.
and 900 ct.)*



*CAMO LEVER
#0345070*

AVAILABLE PRODUCT



SKU	Coverage	Drive Bit (QTY) Size	Box Count QTY	Master Pack
0344654S	50 ft ²	(1) T15	90 ct	8 pack
0344659S	250 ft ²	(1) T15	450 ct	1 pail
0344656S	500 ft ²	(2) T15	900 ct	1 pail

COMPATIBLE TOOLS

CAMO DRIVE
#0345060



CAMO ClipDRIVE
#0345065

