



<b>JOB NAME:</b>		 
<b>CONTRACTOR:</b>	<b>DATE:</b>	
<b>CAMO® EDGECLIP™</b>		
<b>Size:</b>	#7 x 1-3/4-in	
<b>Head Type:</b>	Trim	
<b>Drive Type:</b>	T15 Star	
<b>Point Type:</b>	Sharp Point	

**APPLICATION** For indoor or outdoor applications  
Designed for installation of grooved deck board materials on wood joists

**FEATURES** Compatible with chemically treated lumber  
Features black coating for reduced visibility  
UV protected plastic clip  
Clip covers and hides joist visibility  
Gusset designed for high holding power  
Screw remains accessible for easy removal

**MATERIALS** 305 Stainless Gusset  
305 Stainless Screw  
Nylon Plastic Spacer Body

**COATINGS** Black coating over 305 Stainless meets ASTM B117 for salt spray corrosion testing


**INSTALLATION** Not recommended for use with impact drivers  
Works in tandem with the Camo Starter Clip for grooved deck boards




**CAUTION** Not intended for side wall applications



Deck boards have many different shapes forming the grooves used for clip attachment. Shape variations may include rounded corners and slightly angled grooves. The steeper these angles, the less effective the EdgeXClip winged pre-installation will be. The deeper the groove extends into the board, the higher the risk of board damage from overtightening the screw.

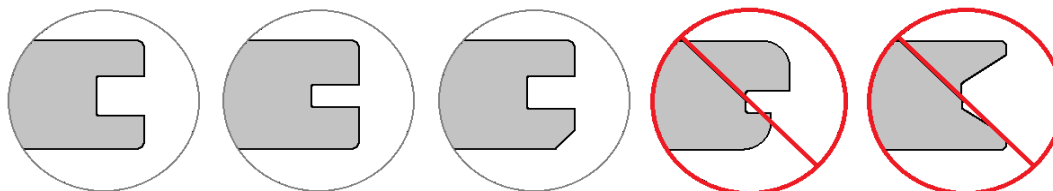


**PENETRATION DEPTH** MINIMUM deck board groove should be 1/8" tall x 1/4" deep. The material remaining below groove (dim A) must be at least 1/4". The bottom of the plastic part of the clip is not designed to contact the joist. See image to the right for a visual representation of the EdgeClip.

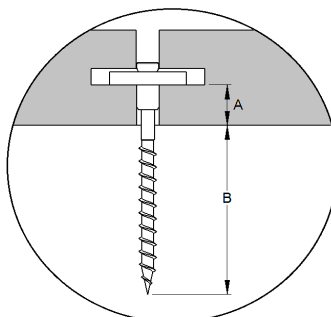

Dimension A	Dimension B
1/4 in	1-1/4 in
3/8 in	1-1/8 in
1/2 in	1 in

# CAMO® EDGECLIP™

## FASTENER DIMENSIONS

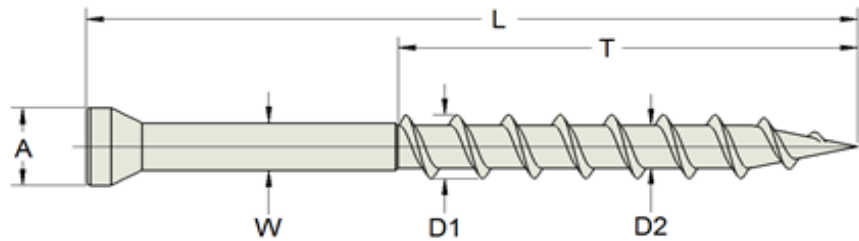

Head Dia.	Major Thread Dia.	Minor Thread Dia.	Overall Length	Shank Dia.	Thread Length
A	D1	D2	L	W	T
Ø 0.200 in	Ø 0.167 in	Ø 0.109 in	1-3/4 in	Ø 0.122 in	1 in

## DIRECTIONS

Slip legs of clip over the installed joist and slide it so the gusset fits inside the board's groove. Repeat for each joist along the length of the deck board. Place the next deck board in position and slide against the clips. The groove should slip over the exposed gusset on the clips. Maintain steady pressure on deck board while securing the screws. While the CAMO Lever tool maintains this steady pressure, use a standard screw gun, the included T15 drive bit, and the included Never-Miss Guide to secure the screw to the joist. For the most efficient installation, use the CAMO Drive tool or CAMO ClipDrive tool (each sold separately).



Never Miss Guide  
(included in  
450 ct, 900 ct)



CAMO Lever  
#0345070

## AVAILABLE PRODUCT



SKU	Coverage	Drive Bit (QTY) Size	Box Count QTY	Master Pack
0344354	50 ft <sup>2</sup>	(1) T15	90 ct	4 pack
0344359	250 ft <sup>2</sup>	(1) T15	450 ct	1 pack
0344356	500 ft <sup>2</sup>	(2) T15	900 ct	1 pail

## COMPATIBLE TOOLS

CAMO Drive  
#0345060



CAMO ClipDrive  
#0345065

